



BACK OF MACHINE / CONNECTIONS



1 The USB Type A connector can connect Post Base to an optional external modem.

2 An RJ-45 Ethernet port is a network interface for the postage meter. The interface can directly connect the postage meter to the Internet, so it can perform remote service requests with the FP infrastructure.

3 A USB Type B connector can connect Post Base to a personal computer. This connection can help route remote service requests to the Internet as well as connect the postage meter with Navigator, an optional software product for FP postage meters.

4 A controller-area network (CAN) interface attaches peripheral devices to Post Base.

