

REMOVING DUST FROM YOUR LETTER FEED SENSOR

Dust can collect here and cause feeder jams. It is recommended to gently wipe the sensor bar to remove any dust. Remove your rollerbox / drawer to gain access too the sensor bar.









