

**Installation of the HCVS-1**

**Table of Contents**

<b>1</b>	<b>General</b> .....	<b>3-3</b>
<b>2</b>	<b>Unpacking instructions</b> .....	<b>3-3</b>
<b>3</b>	<b>Contents of the box</b> .....	<b>3-3</b>
<b>4</b>	<b>Installation</b> .....	<b>3-4</b>
	4.1 Install the side guides .....	3-4
	4.2 Install the back guide .....	3-4
<b>5</b>	<b>Install electrical connection in inserter system</b> .....	<b>3-7</b>

## 1 General

This mounting instruction describes the unpacking and installation of the High Capacity Vertical Stacker (HCVS-1).

## 2 Unpacking instructions

- 1 Remove the two blocks packaging material on top of the system.
- 2 Remove the back guide from the box.



- 3 Remove another three packaging materials.
- 4 Remove the small bag that contains side guides.
- 5 Remove the white paper.
- 6 Remove the stacker base from the box.

## 3 Contents of the box

The box contains the following parts:

Description	Part no.	Qty.	Remark
MI 113	2894404D	1	This document
Accessory connector	2825940M	1	Including wiring
Side guide LH	2825696H	1	
Side guide RH	2825697J	1	
EJOT screw	2825891L	4	
Stacker base		1	
Back guide		1	

## 4 Installation

### 4.1 Install the side guides

- 1 Install the side guides. Use the EJOT screws that are delivered in the small bag.




### 4.2 Install the back guide


- 1 Remove the top cover.




- 2 Install the back guide on the stacker base: push the pins through the holes on both sides until you hear a click on both sides.

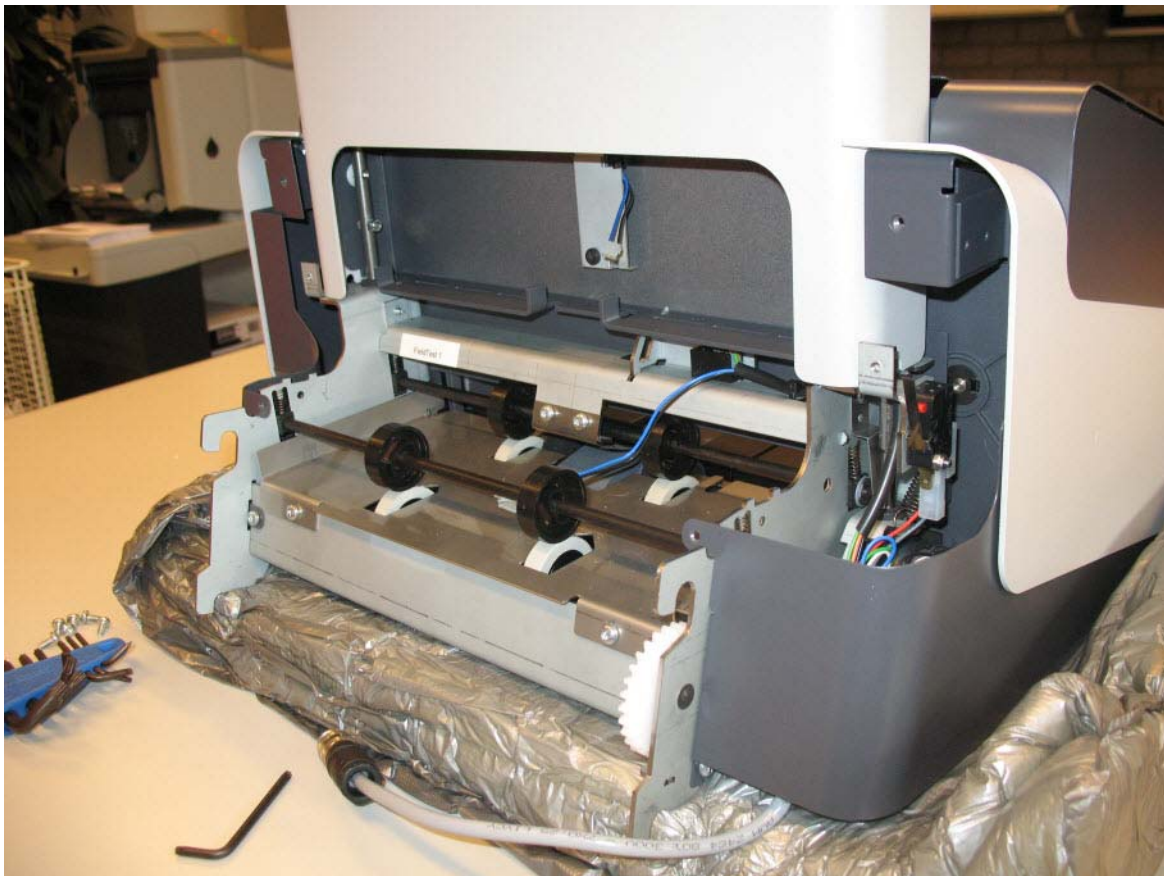

If you do not hear a click, the thick part of the pin did not pass the leaf spring completely. In that case use a screw driver to enforce the leaf spring, see the picture.

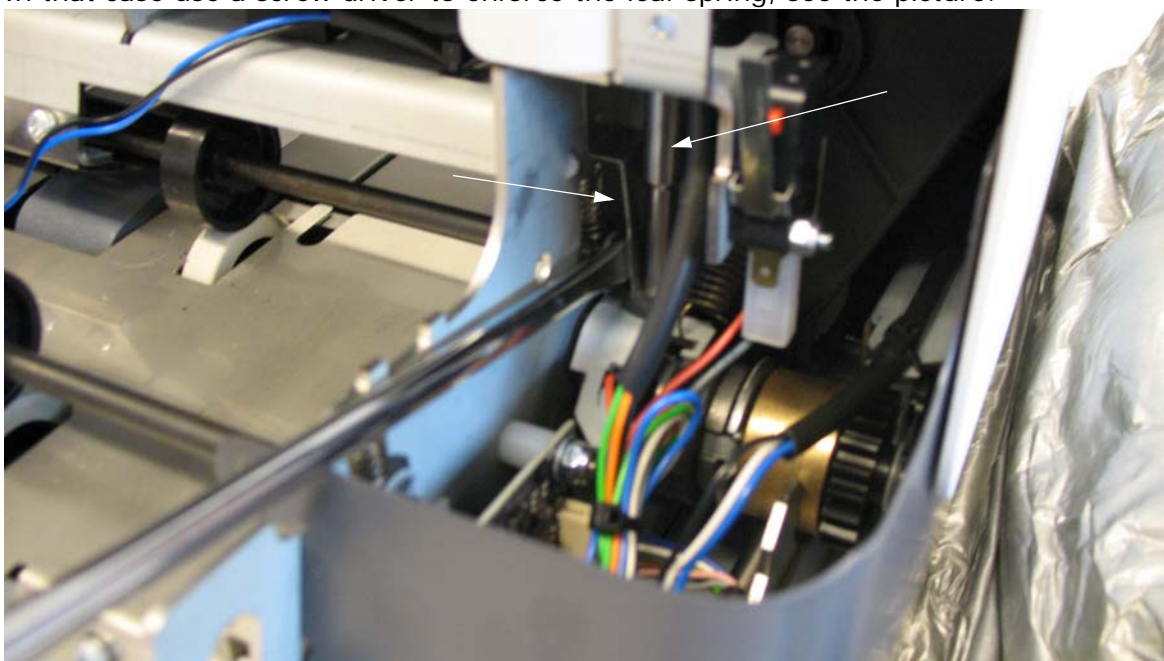

- 3 Connect the connector.

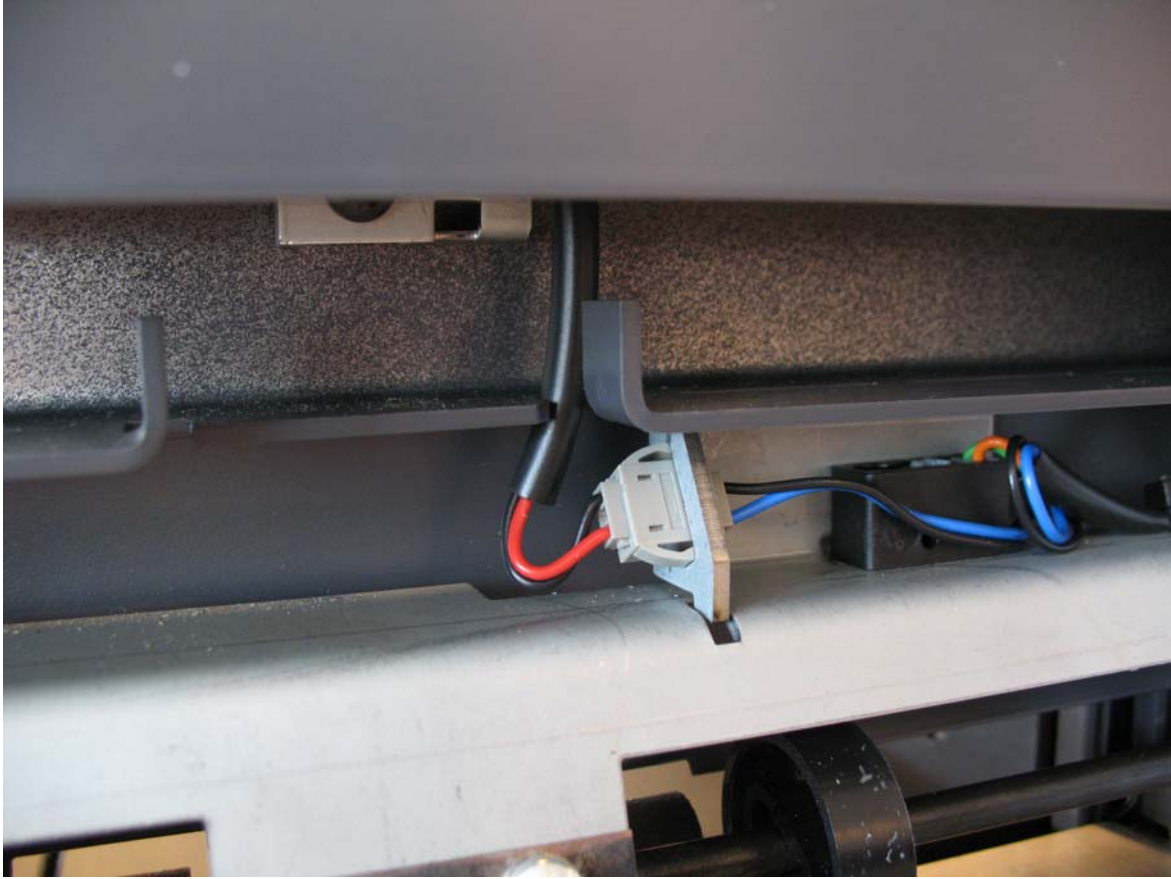


The high capacity vertical stacker is ready for use.

## 5 Install electrical connection in inserter system


If the inserter system does not have an electrical connection point for a stacker, install the accessory connector that is delivered in the box as follows:

- 1 Remove the cover RH of the inserter.
- 2 Position the bracket with connectors as indicated in the picture.

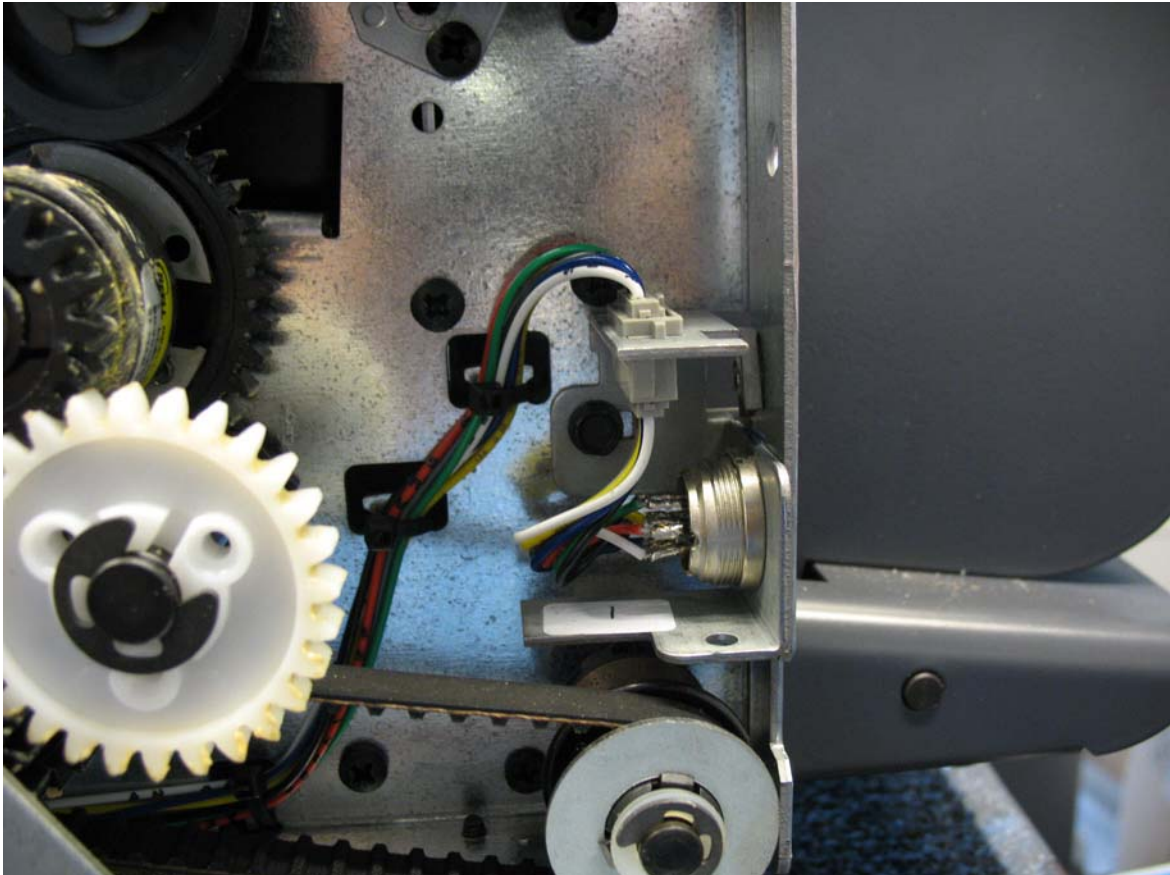

- 3 Install the bracket with the delivered hex. head screw M4x8.
- 4 Connect the connector to the wiring that is already available in the inserter.

- 5 Remove the pre-perforated plate in the RH side cover.

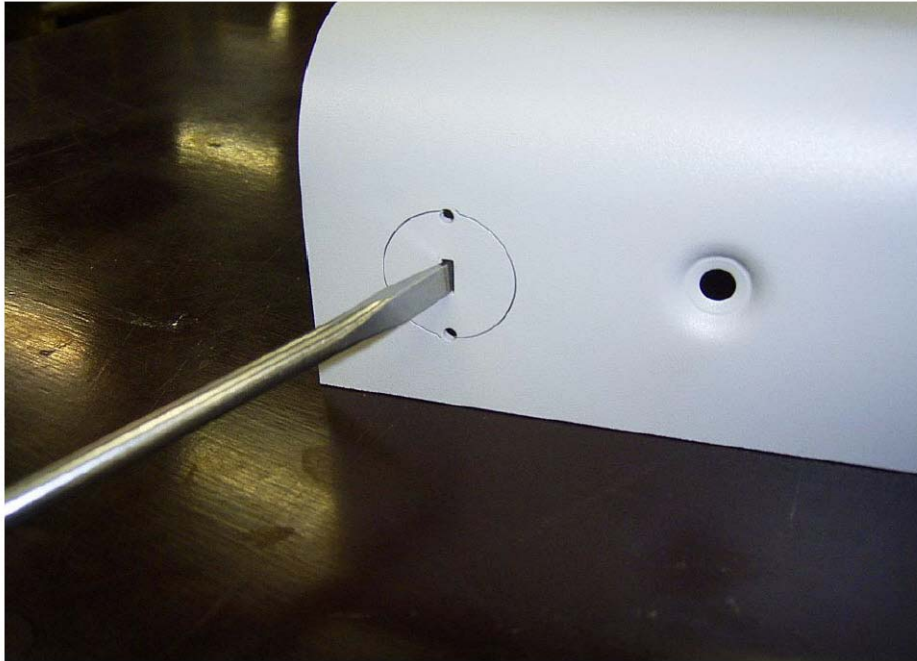

- 6 Replace the cover RH.